MICRO INVERTER



WVC-800(Life)

USER MANUAL

Smart Inverter Expert


IoT Monitoring Platform

Smart mobile "core" life

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- Actual DC input voltage, current and power
- Actual AC output voltage, current and power
- Inverter temperature
- Historical (daily, weekly, monthly) power curve
- Power losses due to weather induced effects
- Optional limitation of power output
- Online switch for the inverter start stop





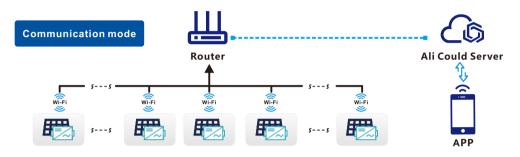

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- A Actual DC input voltage, current and power
- (v) Actual AC output voltage, current and power
- Inverter temperature
- Optional limitation of power output
- Online switch for the inverter start stop
- Historical (daily, weekly, monthly) power curve

Micro inverter Use Manual(Life)

Micro inverter Use Manual(Life)

Annearance and technical features

	Appearance and tech	inical features
	Temperature range	-20°C to +50°C
	Size (L×W×H)	283mm×200mm×41.6mm
	Net amount	1.56kg
	Waterproof grade	Ip65 NEMA3R
	Heat dissipation mode	Self-cooling
	Communication mode	Wi-Fi
	Power transmission mode	Reverse transmission, Load priority
	monitoring system	APP
	Electromagnetic Detection	EN61000-6-1:2007 EN6100-6-3:2007+A1:2011+AC:2012
	Power Grid standard	EN50549-1、EN 50549-2、NBR 16149:2013、UL1741
	Power grid detection	IEC/EN 62109-1、 IEC/EN 62109-2、 IEC 62116、 IEEE 1547
	Certificate	CE , CEC, ETL , INMETRO


Packing weight

Specifications	Each (Packing)	Box (5PCS)		
weight	2.8 K G	14 K G		
Size	342×240×115mm	440×380×260mm		


Detailed




Exterior Accessories

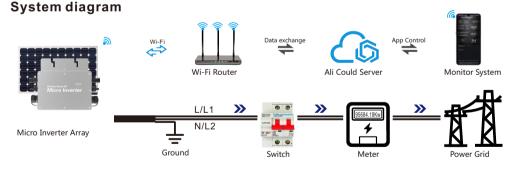

With N wire connection (Single phase 120/230V)

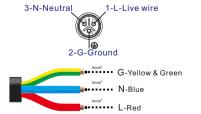

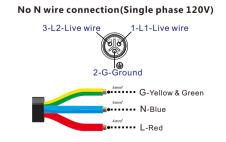




Note: You can purchase a professionally customized AC bus with a T-type connector. Use this AC bus as the AC bus for each branch. Connect it hand in hand to form a modular micro-inverter branch wiring system.

When the inverter is not started/shutdown and has been connected to the grid, the status of the LED indicators is as follows

1) When the inverter is not working ----- Red light is always on 2) When the inverter is in working state ----- Blue light flashes (MPPT is locked to a long light state)

When the inverter is not started/shutdown and is not connected to the grid, the LED indicator status is as follows

1) When the inverter is not working ----- Red light flashes 2) When the inverter is in working state ------ Blue light flashes (MPPT is locked in a long light state), and the red light flashes once every three seconds

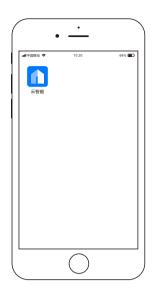

DOWNLOAD Cloud Intelligence APP

Please use the QR code to scan and install the "Cloud Intelligence" client application, System version: Android 5.0, IOS 9 and above







Note


Please strictly observe the following installation conditions

- a) Connect the communication antenna on the inverter;
- b) Install the inverter in a place where the Wifi signal is well covered;
- c) The connected Wi-Fi network needs to be in 2.4G communication mode;
- d) If the WiFi signal cannot effectively cover the inverter, an additional WiFi signal booster can be installed;
- e) Turn on the Bluetooth of the mobile phone;



Features

Smart APP can realize real-time data transmission with the cooperation of Alibaba Cloud IoTThrough graphs and graphic displays in time, users can understand the operation of the power station. The user can monitor the operation and adjust the output power function of the system.

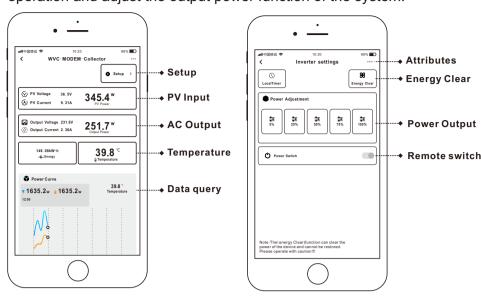

Cloud Intelligence APP



INTELLIGENT lot MONITORING MODEM Number of data collectors per Modem **Built-in WiFi IoT data terminal** Can be used on any smart device (Android/iOS)

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- Actual DC input voltage, current and power
- Actual AC output voltage, current and power • Inverter temperature
- Historical (daily, weekly, monthly) power curve
- Power losses due to weather induced effects
- Optional limitation of power output
- Online switch for the inverter start stop

Micro inverter Use Manual(Life)

Micro inverter Use Manual(Life)

☼)) Bluetooth Mode

Setp 1

Setp 3

Turn on the Bluetooth of the mobile phone, click the "+" icon to add the device;



Select WiFi signal, enter the

Wi-Fi password; click Next


Setp 2


When the inverter appears on the automatic discovery page, click the "+" sign



Setp 4

The system will enter the network configuration state

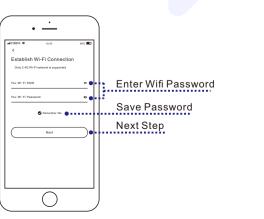

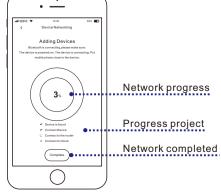

🕵 Wi-Fi Mode


Setp 1

Bluetooth distribution network fails, you can click to scan the QR code to operate



Setp 2

Scan the QR code on the inverter to activate network operation

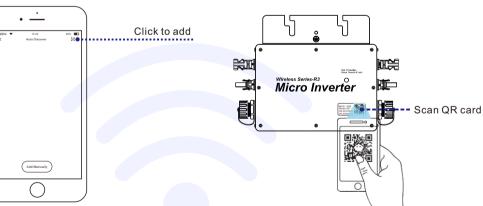

Setp 3

Select WiFi signal, enter the Wi-Fi password; click Next

Setp 4

The system will enter the network configuration state

